


OTA update message



1. Power on and connect network (Make sure the battery is sufficient)




2. Auto message : Wireless update

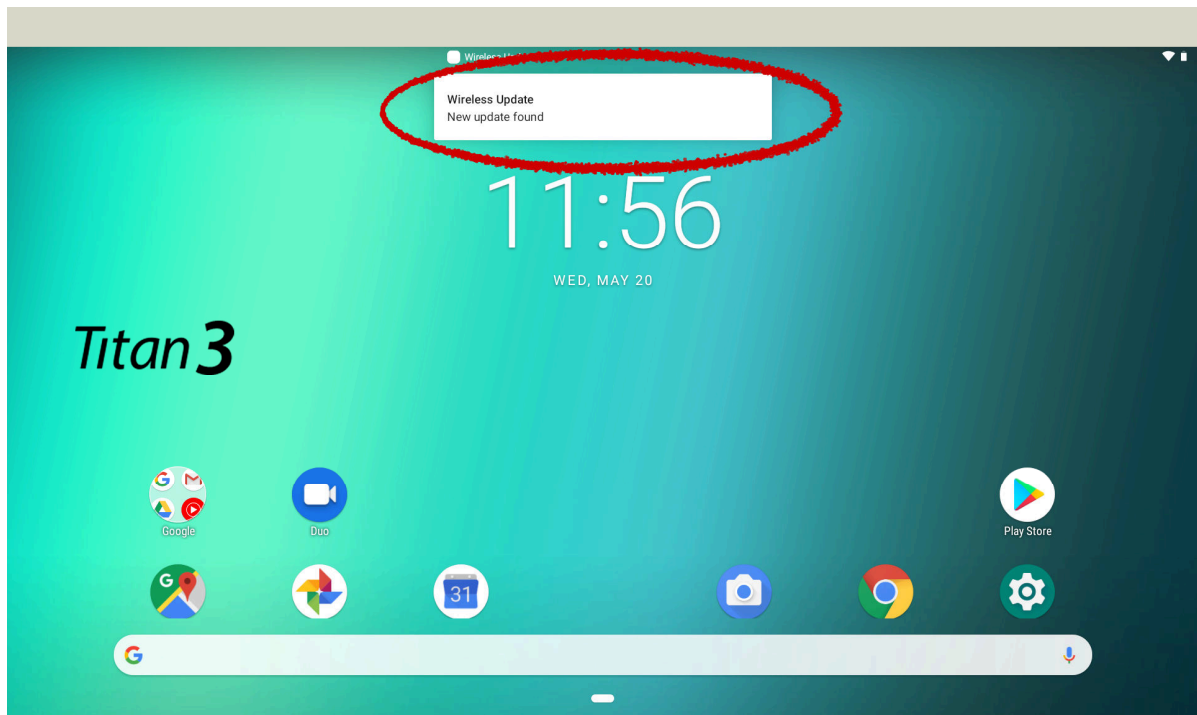


3. Click the message and download software

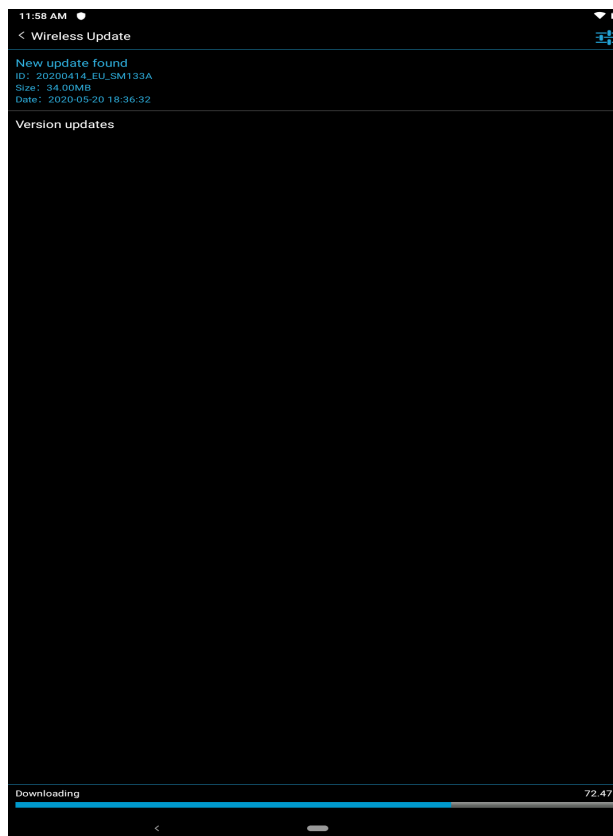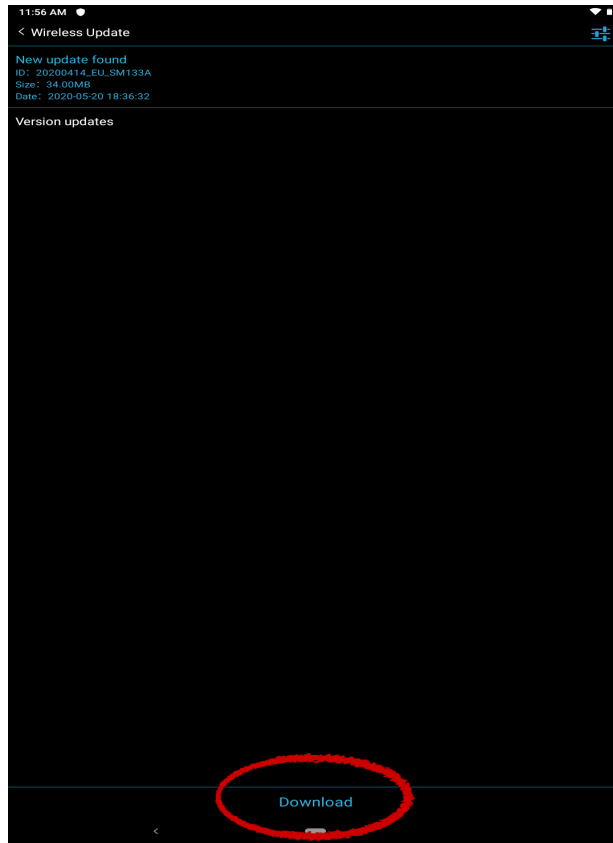

4. Click “ Install now “

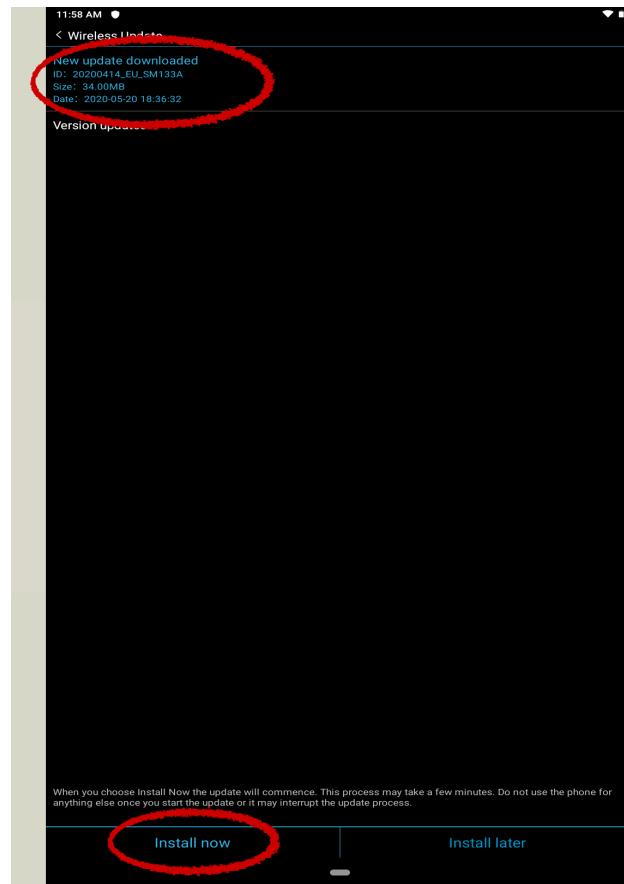

5. After that , system will restart and update automatically and done.

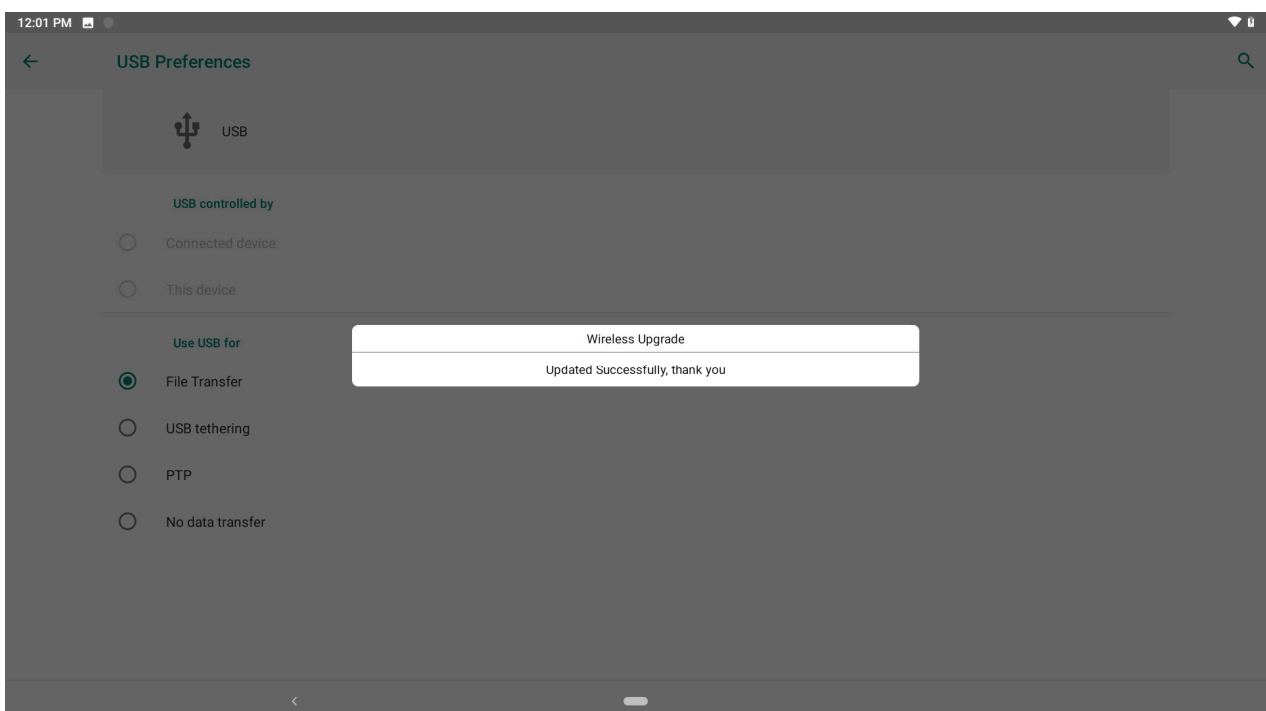

✧ Manual check for system update, if no message. < Settings->System>

